



 

 

 



 











 

 



 




 



 
 





 

















 











Original	Recharge
 Power	 Power
 AV Source	 AV / Input / RDS
 Radio	 TV/Radio /
 Audio Source	 Shift + AV / Input / RDS
 TV / ARC	 Sleep / Timer
 Main menu	 Menu / Home
 Disc Menu	 D.Menu / Top
 Popup Menu	 Setup / OPT /
 OSC / Program	 Shift + TV/Radio / Program
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Recharge
 9	 9
 Search / Auto	 Smart / List
 Search / Auto	 Shift + Red / Netflix /
 0	 0
 Clear / Delete	 Exit / Cancel / Clear
 Volume-	 Vol-
 Up	 Up
 Volume+	 Vol+
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Mute	 Mute / Dimmer
 Repeat	 Shift + Green / APP /
 Zoom / Resolution	 Picture / Format
 Zoom / Resolution	 Zoom / Size





	Original	Recharge
	Mono/Stereo / Subtitle	 Subtitle / EQ
	RDS / Display	 Display / Media
	LypSync	 Info / Angle
	Surround	 +  Shift + Eject / Surround
	Tone	 Text / Goto
	Speaker Level	 Sound / Title
	Open / Close	 Eject / Surround
	Stop	 Stop / Hold
	Play / Pause	 Play / Slow
	Play / Pause	 Pause / Step / Freeze
	Audio	 Audio / Lang I/II
	<< / Tune-	 << / Tune-
	>> / Tune+	 >> / Tune+
	I<< / Preset-	 I<< / Preset-
	>>I / Preset+	 >>I / Preset+
	Red	 Red / Netflix / Search
	Green	 Green / APP / Repeat

	Original	Recharge
	Yellow	 Yellow / YouTube / Repeat
	Blue	 Blue / Prime Video / Random

