



Original	Rechange	Original	Rechange
Power	Power	OSD/Info	Info / Angle
1	TV 1	Prog	TV/Radio /
2	DVD 2	Setup	Setup / OPT /
3	CD-STB 3	Menu	Menu / Home
4	VIDEO 4	Audio	Audio / Lang I/II
5	TAPE 5	Title	Shift + Sound / Title
6	TUNER 6	Subtitle	Subtitle / EQ
7	AUX-HDD 7	Timer	Shift + Sleep / Timer
8	USB 8	+10	Guide / EPG / -/-
9	BLUETOOTH 9	Sleep	Sleep / Timer
0	HDMI-BAT 0	Play	Play / Slow
AUX	Shift + 7	Clock	Back / Return
USB	Shift + 8	Pause	Pause / Step / Freeze
Card	Shift + 4	Enter	OK
DVD	Shift + 2	Up/Preset+	Up
Tuner	Shift + 6	Down/Preset-	Down
Tape	Shift + 5	>>/Tun+	>> / Tune+





Original	Rechange
 <</Tun-	 << / Tune-
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Repeat	 Green / APP / Repeat
 Goto	 Text / Goto
 Rec	 Rec / Rec Mode
 Vol-	 Vol-
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 Demo	 Picture / Format
 EQ	 Shift + Subtitle / EQ
 Bass	 Shift + Audio / Lang I/II
 St/Mono	 Sound / Title
 Bookmark	 Display / Media
 Intro	 D.Menu / Top
 Rand	 Blue / Prime Video / Random

Original	Rechange
 RDS/A-B	 AV / Input / RDS
 Zoom	 Zoom / Size
 P.Scan	 Eject / Surround
 Angle	 Shift + Info / Angle
 Step	 Shift + Pause / Step /
 Slow	 Shift + Play /

