





Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 Media	 Display / Media
 AV	 AV / Input / RDS
 Freeze	 Shift + Pause / Step /
 Exit	 Exit / Cancel / Clear
 Guide	 Guide / EPG / -/--
 Text	 Text / Goto
 Subt.	 Subtitle / EQ
 Format	 Picture / Format
 Mode	 Setup / OPT /
 Up	 Up
 Lang.	 Audio / Lang I/II
 Left	 Left
 OK	 OK
 Right	 Right
 Menu / Back	 Menu / Home

Original	Rechange
 Down	 Down
 Info	 Info / Angle
 PR-	 CH- / Page-
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Vol+	 Vol+
 Red / List / Page+	 Red / Netflix / Search
 Red / List / Page+	 Shift + CH+ /
 Red / List / Page+	 Smart / List
 Green / Page-	 Green / APP / Repeat
 Green / Page-	 Shift + CH- /
 Yellow / Sound	 Sound / Title
 Yellow / Sound	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3





Original		Rechange		Original		Rechange	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Fav.		Fav / Marker / PC				
	0		0				
	P<P		Back / Return				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Timers		Sleep / Timer				
	Lib.		D.Menu / Top				
	Play		Play / Slow				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				

