










 












 


 























Original		Rechange		Original		Rechange	
	Input		AV / Input / RDS		Menu		Menu / Home
	Power		Power		[≡i]/Index		Display / Media
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		EPG		Guide / EPG / -/--
	6		6		Vol+		Vol+
	7		7		Mute		Mute / Dimmer
	8		8		P+		CH+ / Page+
	9		9		Vol-		Vol-
	Pro. List		Smart / List		I/I-II		Audio / Lang I/II
	0		0		P-		CH- / Page-
	Last		Back / Return		Red		Red / Netflix / Search
	Info		Info / Angle		Green		Green / APP / Repeat
	[≡?]/Reveal		Play / Slow		Yellow		Yellow / YouTube / Repeat
	Up		Up		Blue		Blue / Prime Video / Random





	Original	Rechange	Original	Rechange
	Text	 Text / Goto		
	[ /≡]/Mix	 Rec / Rec Mode		
	[≡B]/Subtitle	 Subtitle / EQ		
	* /Freeze	 Pause / Step / Freeze		
	[<>]/Aspect	 Setup / OPT /		
	Sleep	 Sleep / Timer		
	♥ /FAV	 Fav / Marker / PC		

