



Original	Rechange	Original	Rechange
TV/RAD	TV/Radio /	Vol+	Vol+
Power	Power	Mute	Mute / Dimmer
Input	AV / Input / RDS	P+/Page Up	CH+ / Page+
AV Mode	Picture / Format	Vol-	Vol-
Power Saving	Eject / Surround	P-/Page Down	CH- / Page-
1	1	Up	Up
2	2	Left	Left
3	3	OK	OK
4	4	Right	Right
5	5	Menu	Menu / Home
6	6	Down	Down
7	7	Return / Exit	Back / Return
8	8	Red	Red / Netflix / Search
9	9	Green	Green / APP / Repeat
List	Smart / List	Yellow	Yellow / YouTube / Repeat
0	0	Blue	Blue / Prime Video / Random
Q.View	Display / Media	Text/[≡]	Text / Goto

Original	Rechange	Original	Rechange
TV	DVD	SAT	AUX
SLOW	STEP-FREEZE	HOLD	REC MODE
TUNE-	TUNE+	PRESET-	PRESET+
TITLE	LANG UI	EQ	SURROUND
SOUND	AUDIO	SUBTITLE	PROGRAM
FORMAT	SIZE	TIMER	TV RADIO
PICTURE	ZOOM	SLEEP	RDS
TOP MENU	OPT-TOOLS	GOTO	AV INPUT
D.MENU	SETUP	TEXT	AV INPUT
HOME	ANGLE	MENU	INFO
CLEAR	RETURN	EXIT	BACK
CANCEL	LIST	VOL+	CH+ / Page+
VOL-	SMART	MEDIA	DISPLAY
TV	DVD	CD - STB	CH- / Page-
VIDEO	TAPE	TUNER	1
AUX - HDD	USB	BLUETOOTH	2
GUIDE EPG	HDMI - BAT	PC	3
NETFLIX	APP	FAV MARKER	4
APP	YouTube	Prime Video	5
REPEAT	REPEAT A-B	RANDOM	6
SEARCH	REPEAT	REPEAT A-B	7
REPEAT A-B	RANDOM	GOTO TEXT	8
GOTO TEXT	TEXT	TEXT	9
TEXT	TEXT	TEXT	0
TEXT	TEXT	TEXT	TEXT



