




Original		Rechange		Original		Rechange	
	Power		Power		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		Exit		Exit / Cancel / Clear
	6		6		EPG		Guide / EPG / -/--
	7		7		TV		Display / Media
	8		8		TV		AV / Input / RDS
	9		9		Radio		TV/Radio /
	< Prev		I<< / Preset-		Red		Red / Netflix / Search
	0		0		Green		Green / APP / Repeat
	Next>		>>I / Preset+		Yellow		Yellow / YouTube / Repeat
	Help		D.Menu / Top		Blue		Blue / Prime Video / Random
	Timer		Sleep / Timer		Vol+		Vol+
	Menu		Menu / Home		Mute		Mute / Dimmer
	Info		Info / Angle		CH+		CH+ / Page+





Original		Rechange	
	Vol-		Vol-
	PVR		Smart / List
	CH-		CH- / Page-
	Audio		Audio / Lang I/II
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	<<		<< / Tune-
	Play		Play / Slow
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode

Original		Rechange	

