




























Original		Rechange		Original		Rechange	
	Sound Mode		Sound / Title		8		8
	FM Mode/Mute		Audio / Lang I/II		8 CD		Shift + 8
	Power		Power		9		9
	1		1		9 CD		Shift + 9
	1 CD		Shift + 1		10		0
	2		2		10 CD		Shift + 0
	2 CD		Shift + 2		+10		Guide / EPG / -/-
	3		3		+10 CD		Shift + Guide / EPG / -/-
	3 CD		Shift + 3		Tuner		Fav / Marker / PC
	4		4		AUX		AV / Input / RDS
	4 CD		Shift + 4		Program		TV/Radio /
	5		5		Cancel		Exit / Cancel / Clear
	5 CD		Shift + 5		I<< CD		I<< / Preset-
	6		6		>>I CD		>>I / Preset+
	6 CD		Shift + 6		Stop CD		Stop / Hold
	7		7		Play CD		Play / Slow
	7 CD		Shift + 7		< Deck A		Left





Original	Rechange	Original	Rechange
	> Deck A		Right
	< Deck B		Shift + Left
	> Deck B		Shift + Right
	<< Deck A		Down
	>> Deck A		Up
	<< Deck B		<< / Tune-
	>> Deck b		>> / Tune+
	Fade Muting		Mute / Dimmer
	Stop Deck A		OK
	Rec Pause Deck B		Rec / Rec Mode
	Stop Deck B		Shift + Stop /
	Volume-		Vol-
	Volume+		Vol+

