

 







 








 


















 





















 











 















Original		Rechange		Original		Rechange	
	Power		Power		RDS Display		Display / Media
	1		1		Left / P.Call- / I<<		I<< / Preset-
	2		2		Up		Up
	3		3		Right / P.Call+ / >>I		>>I / Preset+
	4		4		Down		Down
	5		5		<< / Tuning-		<< / Tune-
	6		6		>> / Tuning+		>> / Tune+
	7		7		Play Reverse		Left
	8		8		Play/Pause / Band		Play / Slow
	9		9		Bass Boost		Audio / Lang I/II
	0		0		A/B +100 Disc		Fav / Marker / PC
	+10		Guide / EPG / -/--		Auto / Stop		Stop / Hold
	Loudness / Page Down		CH- / Page-		DVD/6CH		Shift + 2
	Page Up / PTY		CH+ / Page+		PHONO		Shift + 1
	Set Up		Setup / OPT /		CD/DVD		Shift + 3
	Sound		Sound / Title		Tuner		Shift + 6
	Listen Mode		Smart / List		MD/Tape		Shift + 5



 

















 

 



















 





 













Original	Rechange	Original	Rechange
 Video1	 +  Shift + 4		
 Video 2	 +  Shift + 8		
 Cinema EQ	 Subtitle / EQ		
 Tone	 Eject / Surround		
 Mute	 Mute / Dimmer		
 Volume-	 Vol-		
 Volume+	 Vol+		





Original	Rechange	Original	Rechange
 DVD Power	 Power	 Up	 Up
 1	 1	 Right/>>>I	 >>I / Preset+
 2	 2	 Down	 Down
 3	 3	 << Tuning	 << / Tune-
 4	 4	 >> Tuning	 >> / Tune+
 5	 5	 Enter	 OK
 6	 6	 Play/Pause	 Play / Slow
 7	 7	 Stop	 Stop / Hold
 8	 8	 Pause	 Pause / Step / Freeze
 9	 9	 Mute	 Mute / Dimmer
 0	 0	 Volume-	 Vol-
 +10	 Guide / EPG / -/--	 Volume+	 Vol+
 Menu	 Menu / Home		
 OSD	 Display / Media		
 Return	 Back / Return		
 Top Menu	 D.Menu / Top		
 Left/I<<<	 I<<< / Preset-		

