 

 





 




 




 

 

 

 



 

 

 



 

 

 
 
 

 







 





 



 









Original	Recharge	Original	Recharge
 Input	 AV / Input / RDS	 OK	 OK
 Power	 Power	 Right	 Right
 Amazon	 Blue / Prime Video / Random	 Down	 Down
 Netflix	 Red / Netflix / Search	 Back	 Back / Return
 iHeart Radio	 Setup / OPT /	 Guide	 Guide / EPG / -/-
 <<	 << / Tune-	 Vol+	 Vol+
 Pause	 Pause / Step / Freeze	 V	 Display / Media
 Play	 Play / Slow	 CH+	 CH+ / Page+
 >>	 >> / Tune+	 Vol-	 Vol-
 CC	 Subtitle / EQ	 CH-	 CH- / Page-
 Rec	 Rec / Rec Mode	 Mute	 Mute / Dimmer
 Stop	 Stop / Hold	 [ ]	 Zoom / Size
 Menu	 Menu / Home	 PIC	 Picture / Format
 Exit	 Exit / Cancel / Clear	 Recall	 Fav / Marker / PC
 Info	 Info / Angle	 1	 1
 Up	 Up	 2	 2
 Left	 Left	 3	 3





	Original	Rechange	Original	Rechange
	4	4		
	5	5		
	6	6		
	7	7		
	8	8		
	9	9		
	ENTER	Enter		
	0	0		
	--	--		

