 



 

 



 

 

 

 

 



 

 







 


















 

 

 

 



 







Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Menu	 Menu / Home
 0	 0
 Guia	 Guide / EPG / -/-
 Vol+	 Vol+
 ↑	 >> / Tune+
 C+	 CH+ / Page+

Original	Recharge
 Vol-	 Vol-
 ↓	 << / Tune-
 C-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK/OPC	 OK
 Right	 Right
 Salir	 Exit / Cancel / Clear
 Down	 Down
 Info	 Info / Angle
 Audio	 Audio / Lang I/II
 "	 Setup / OPT /
 [=]	 Text / Goto
 ←	 Back / Return
 Red/Fav+	 Red / Netflix / Search
 Green/Radio/TV	 Green / APP / Repeat
 Yellow/Ayuda	 Yellow / YouTube / Repeat





Original	Recharge	Original	Recharge
	 Blue / Prime Video / Random		

