

 






























































Original	Rechange
 Standby	 Power
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I / II
 Open/Close	 Eject / Surround
 Angle	 Info / Angle
 Title	 Sound / Title
 Vol+	 Vol+
 Prog	 TV / Radio /
 Menu	 Menu / Home
 Vol-	 Vol-
 Setup	 Setup / OPT /
 Up	 Up
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Left	 Left
 Enter	 OK
 Right	 Right

Original	Rechange
 Mute	 Mute / Dimmer
 Down	 Down
 Stop	 Stop / Hold
 1	 1
 2	 2
 3	 3
 Goto	 Text / Goto
 4	 4
 5	 5
 6	 6
 Clear	 Exit / Cancel / Clear
 7	 7
 8	 8
 9	 9
 0	 0
 <<	 << / Tune-
 >>	 >> / Tune+





	Original	Recharge
	I<<	 I<< / Preset-
	>>I	 >>I / Preset+
	P/N	 Red / Netflix / Search
	Display	 Display / Media
	Zoom	 Zoom / Size
	Slow	 Shift + Play /
	Step	 Shift + Pause / Step /
	A-B	 Yellow / YouTube / Repeat
	Repeat	 Green / APP / Repeat
	V-Mode	 Picture / Format

	Original	Recharge

