 





 

 


















 










	Original	Rechange
	Mute	 Mute / Dimmer
	Power	 Power
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	Recall	 Back / Return
	FAV	 Fav / Marker / PC
	Red	 Red / Netflix / Search
	Green	 Green / APP / Repeat
	Yellow	 Yellow / YouTube / Repeat

	Original	Rechange
	Blue	 Blue / Prime Video / Random
	Rec	 Rec / Rec Mode
	I<<	 I<< / Preset-
	CH+	 CH+ / Page+
	Up	 Up
	Info	 Info / Angle
	Subtitle	 Subtitle / EQ
	Vol-	 Vol-
	Left	 Left
	OK	 OK
	Right	 Right
	Vol+	 Vol+
	EPG	 Guide / EPG / -/-
	Menu	 Menu / Home
	Down	 Down
	CH-	 CH- / Page-
	>>I	 >>I / Preset+





	Original	Rechange	Original	Rechange
	EXIT	EXIT / CANCEL / CLEAR		
	TEXT	TEXT / GOTO		
	AUTO	Smart / List		
	ZOOM	Zoom / Size		
	LAN/AUDIO	Audio / Lang I/II		
	Tv/RADIO	TV/Radio /		
	<<<	<<< / Tune-		
	>>>	>>> / Tune+		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	Stop	Stop / Hold		

