



Original		Rechange		Original		Rechange	
	Power		Power		Source		AV / Input / RDS
	Mute		Mute / Dimmer		Up		Up
	1		1		Audio / Nicam		Audio / Lang I/II
	2		2		Left		Left
	3		3		OK		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Exit		Exit / Cancel / Clear
	7		7		Menu		Menu / Home
	8		8		Vol+		Vol+
	9		9		Mouse On/Off		D.Menu / Top
	Recall		Back / Return		CH+		CH+ / Page+
	0		0		Vol-		Vol-
	Sleep		Sleep / Timer		Home		Shift + Menu /
			Shift + 1		CH-		CH- / Page-
			Shift + 2		P.Mode		Picture / Format
	CH.List		Smart / List		S.Mode		Sound / Title





Original		Recharge		Original		Recharge	
	Display		Display / Media		Yellow		Yellow / YouTube / Repeat
	Fav		Fav / Marker / PC		Blue		Blue / Prime Video / Random
	TXT		Text / Goto				
	Sub / Index		Subtitle / EQ				
	EPG / S. Page		Guide / EPG / -/--				
	Size		Zoom / Size				
	Stop		Stop / Hold				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	Hold / Aspect		Setup / OPT /				
	Hold / Aspect		Shift + Stop /				
	Play / Pause		Play / Slow				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Reveal / Antena		TV/Radio /				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				

