



Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol+
	Energy Saving		Sleep / Timer		Vol+		Vol+
	AV Mode		Picture / Format		FAV/Mark/Char/Nu		Fav / Marker / PC
	Input		AV / Input / RDS		P+		CH+ / Page+
	Tv/Rad		TV/Radio /		Vol-		Vol-
	1		1		3D		Zoom / Size
	2		2		Mute/Delete		Mute / Dimmer
	3		3		P-		CH- / Page-
	4		4		Menu		Menu / Home
	5		5		NetCast		Sound / Title
	6		6		Q.Menu		D.Menu / Top
	7		7		Up		Up
	8		8		Left		Left
	9		9		OK		OK
	List		Smart / List		Right		Right
	0		0		Down		Down
	Q.Vlew		Setup / OPT /		Exit		Exit / Cancel / Clear
					Back		Back / Return





Original	Recharge	Original	Recharge
GUIDE	Guide	GUIDE EPG	Guide / EPG / -/--
Red	Red	NETFLIX SEARCH	Red / Netflix / Search
Green	Green	APP REPEAT	Green / APP / Repeat
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
L/R SELECT	Blue/L/R/Select	Prime Video RANDOM	Blue / Prime Video / Random
TEXT	Text	GOTO TEXT	Text / Goto
T.OPT	T.Opt	SHIFT + OPT-TOOLS SETUP	Shift + Setup / OPT / Tools
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
Stop	Stop	HOLD	Stop / Hold
Play	Play	SLOW	Play / Slow
Pause	Pause	STEP-FREEZE	Pause / Step / Freeze
<<	<<	TUNE-	<< / Tune-
>>	>>	TUNE+	>> / Tune+
Simplink	Simplink	MEDIA DISPLAY	Display / Media
INFO	Info	ANGLE INFO	Info / Angle
AD	AD	LANG I/II AUDIO	Audio / Lang I/II
APP/*	APP/*	SHIFT + APP REPEAT	Shift + Green / APP / Repeat

