



 



 

 

 

 

 





 



Original	Rechange
 Operate	 Power
 Open / Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 CH +	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 CH -	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Direct	 Setup / OPT /
 -/--	 Guide / EPG / -/--
 0	 0
 C / Erase	 Shift + Exit / Cancel / Clear

Original	Rechange
 Show View	 Info / Angle
 TV / DVD	 TV/Radio /
 Timer On / Off	 Sleep / Timer
 Time Shift	 Text / Goto
 Dubbing	 Vol-
 P in P	 Picture / Format
 Input	 AV / Input / RDS
 HDD	 Shift + 7
 Start Menu	 Menu / Home
 DVD	 Shift + 2
 Rec List / DVD Top Menu	 Smart / List
 Up	 Up
 Original / Playlist / DVD Menu	 D.Menu / Top
 Left	 Left
 Set / Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear





Original	Recharge
 Down	 Down
 Return	 Back / Return
 Yellow	 Blue / Prime Video / Random
 Blue	 Red / Netflix / Search
 Red	 Green / APP / Repeat
 Green	 Yellow / YouTube / Repeat
 << REV	 << / Tune-
 Play	 Play / Slow
 >> FWD	 >> / Tune+
 Still / Pause	 Pause / Step / Freeze
 Stop / Live	 Stop / Hold
 Slow	 Shift + Play /
 I<< / <II F.Adv	 I<< / Preset-
 >>I / F.Adv II>	 >>I / Preset+
 Replay	 Sound / Title
 Skip Search	 Shift + Red / Netflix /
 Function	 Zoom / Size

Original	Recharge
 Angle	 Shift + Info / Angle
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 REC	 Rec / Rec Mode
 REC Stop	 Shift + Stop /
 REC Pause	 Shift + Pause / Step /
 Rec Mode	 Shift + Rec / Rec Mode
 Direct REC TV	 Shift + Eject / Surround
 Chapter Mark / RGB OFF	 Fav / Marker / PC
 On Screen Tamper Proof	 Vol+
 Display / Back Light	 Display / Media

