




























 














































Original	Recharge	Original	Recharge
Power		Power	
Play		Play / Slow	
Pause		Pause / Step / Freeze	
Stop		Stop / Hold	
Rec		Rec / Rec Mode	
<<		<< / Tune-	
>>		>> / Tune+	
Eject		Eject / Surround	
Timer		Sleep / Timer	
Menu		Menu / Home	
Up		Up	
Left		Left	
Right		Right	
C.Reset		Exit / Cancel / Clear	
Down		Down	
Prog Up		CH+ / Page+	
ShowView		Display / Media	
Prog Down		CH- / Page-	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
+10/Daily/Weekly		Guide / EPG / -/-	
0		0	
Quick-Find		Red / Netflix / Search	
Time Search		Green / APP / Repeat	
Index Search		Yellow / YouTube / Repeat	
Speed		Blue / Prime Video / Random	
I> Slow		Shift + Play / Slow	



Original	Recharge	Original	Recharge
Power		Power	
Play		Play / Slow	
Pause		Pause / Step / Freeze	
Stop		Stop / Hold	
<<		<< / Tune-	
>>		>> / Tune+	
I<< Skip		I<< / Preset-	
Skip >>I		>>I / Preset+	
Audio		Audio / Lang I/II	
Subtitle		Subtitle / EQ	
Open/Close		Eject / Surround	
Zoom		Zoom / Size	
Top Menu		D.Menu / Top	
Setup		Setup / OPT /	
Mode		Text / Goto	
Menu		Menu / Home	
Up		Up	
Angle		Info / Angle	
Left		Left	
Enter		OK	
Right		Right	
Clear		Exit / Cancel / Clear	
Down		Down	
Return		Back / Return	
Disc Navigator		Smart / List	
Display		Display / Media	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	



Original	Recharge	Original	Recharge
9	 9		
+10	 Guide / EPG / -/--		
0	 0		
Search Mode	 Red / Netflix / Search		
Repeat	 Green / APP / Repeat		
A-B Repeat	 Yellow / YouTube / Repeat		
Surround	 +  Shift + Eject / Surround		

