





Original	Rechange
Power	Power
Input	AV / Input / RDS
Sleep	Sleep / Timer
Nicam	Audio / Lang I/II
P.Mode	Picture / Format
S.Mode	Sound / Title
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	+ Shift + Guide / EPG / -/--
0	0

Original	Rechange
Recall	Back / Return
Del	+ Shift + Exit / Cancel / Clear
Subtitle	Subtitle / EQ
EPG	Guide / EPG / -/--
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Mute	Mute / Dimmer
Up	Up
Info	Info / Angle
Left	Left
OK / CH List	OK
Right	Right
Menu	Menu / Home
Down	Down
Exit	Exit / Cancel / Clear





Original	Rechange	Original	Rechange
 Vol+	 Vol+	 << / TV/Radio	 TV/Radio /
 Home	 D.Menu / Top	 >> / Hold	 >> / Tune+
 CH+	 CH+ / Page+	 >> / Hold	 Shift + Stop /
 Vol-	 Vol-	 Stop / Reveal	 Stop / Hold
 Browser	 Smart / List	 I<< / Size	 I<< / Preset-
 CH-	 CH- / Page-	 >>I / Index	 >>I / Preset+
 Rec	 Rec / Rec Mode		
 Fav / Goto	 Fav / Marker / PC		
 Fav / Goto	 Shift + Text /		
 T.Shift	 Setup / OPT /		
 PVR List	 Display / Media		
 S.Page	 Eject / Surround		
 Zoom	 Zoom / Size		
 Play/Pause / TTX	 Pause / Step / Freeze		
 Play/Pause / TTX	 Text / Goto		
 Play/Pause / TTX	 Play / Slow		
 << / TV/Radio	 << / Tune-		

