

















































































Original	Recharge	Original	Recharge
Off	 Power	Up / P+	 Up
Mute	 Mute / Dimmer	Left / Vol-	 Left
Hold	 Stop / Hold	OK	 OK
Reveal	 << / Tune-	Right / Vol+	 Right
Sound	 Sound / Title	PS	 Exit / Cancel / Clear
A/B	 Audio / Lang I/II	Down / P-	 Down
Subcode	 Subtitle / EQ	P/C	 Back / Return
<!>	 Eject / Surround	Right / Vol+	 Vol+
earspnes	 Picture / Format	VT/TV	 Smart / List
Size	 Zoom / Size	Up / P+	 CH+ / Page+
[.]	 Sleep / Timer	Left / Vol-	 Vol-
Norm	 TV/Radio /	Display	 Display / Media
Contrast	 D.Menu / Top	Down / P-	 CH- / Page-
Color	 Setup / OPT /	1	 1
Text	 Text / Goto	2	 2
AV	 AV / Input / RDS	3	 3
Brightness	 Menu / Home	4	 4




Original		Recharge
5		5
6		6
7		7
8		8
9		9
--		Guide / EPG / --
0		0
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Mix		Shift + Text /

Original	Recharge



Original	Recharge	Original	Recharge
On/Off	 Power	Info	 Info / Angle
Mute	 Mute / Dimmer	Menu Left	 Left
Update	 Play / Slow	OK Enter	 OK
Reveal	 Pause / Step / Freeze	Menu Right	 Right
Txt Stop	 Stop / Hold	Menu Off	 Exit / Cancel / Clear
Color- S.Std	 Sound / Title	Menu Down	 Down
Menu audio	 Audio / Lang I/II	Back	 Back / Return
Subt.List	 Subtitle / EQ	Volume+	 Vol+
Surround	 Eject / Surround	Display	 Smart / List
Txt Expand	 Zoom / Size	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Disp	 Display / Media
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
On/Tim	 Setup / OPT /	1	 1
Text	 Text / Goto	2	 2
Menu	 Menu / Home	3	 3
Menu Up	 Up	4	 4



Original	Recharge	Original	Recharge
5			
6			
7			
8			
9			
Guide -/-- 1.			
0/10			
2.Fav P/C 2.			
Red			
Green			
Yellow			
Blue			
Nicam/Mono	 + 		
Level L	 + 		
Level R/Woofers	 + 		
Audio+	 + 		

