


Original	Recharge
Standby	Power
P/N	Smart / List
Mute	Mute / Dimmer
Eject	Eject / Surround
Prog	TV/Radio /
1	1
2	2
3	3
Search	Red / Netflix / Search
4	4
5	5
6	6
Subtitle	Subtitle / EQ
7	7
8	8
9	9
Angle	Info / Angle

Original	Recharge
0	0
10+	Guide / EPG / -/-
PBC	D.Menu / Top
Setup	Setup / OPT /
Up	Up
Return	Back / Return
Left	Left
Enter	OK
Right	Right
Title	Sound / Title
Down	Down
Menu	Menu / Home
Channel	Text / Goto
Language	Audio / Lang I/II
Zoom	Zoom / Size
Repeat	Green / APP / Repeat
Mark	Fav / Marker / PC

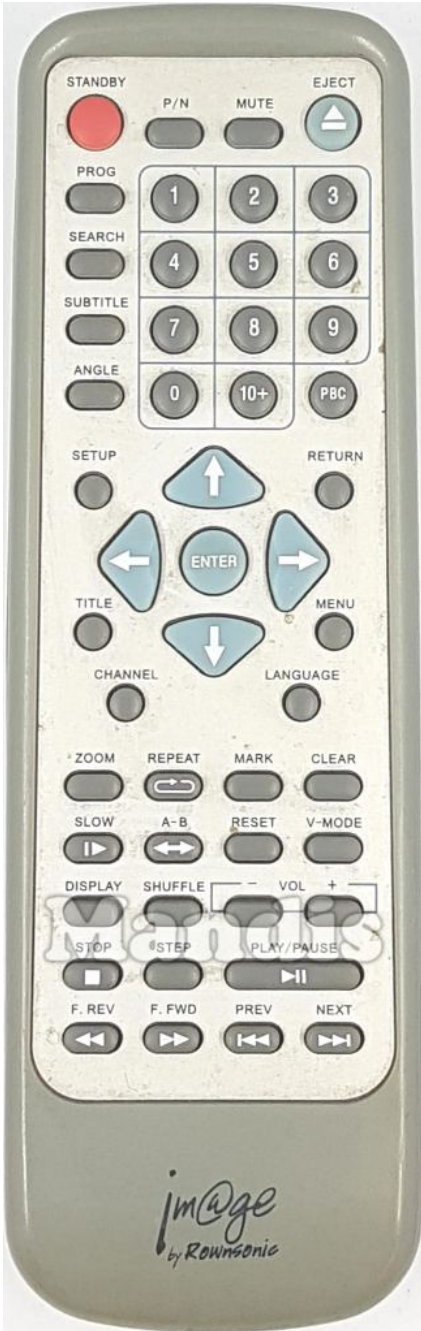



Original	Recharge
CLEAR Clear	CLEAR EXIT CANCEL Exit / Cancel / Clear
SLOW I> Slow	SHIFT + SLOW Play /
A-B ↔/A-B	YouTube REPEAT A-B Yellow / YouTube / Repeat
RESET Reset	RDS AV INPUT AV / Input / RDS
V-MODE V-Mode	FORMAT PICTURE Picture / Format
DISPLAY Display	MEDIA DISPLAY Display / Media
SHUFFLE Shuffle	Prime Video RANDOM Blue / Prime Video / Random
VOL- Vol-	VOL Vol-
VOL+ Vol+	+ VOL Vol+
STOP Stop	HOLD Stop / Hold
STEP Step	SHIFT + STEP-FREEZE Pause / Step /
PLAY/PAUSE Play	SLOW Play / Slow
PLAY/PAUSE Pause	STEP-FREEZE Pause / Step / Freeze
F. REV <</F.Rev	TUNE- << / Tune-
F. FWD >>/F.FWD	TUNE+ >> / Tune+
PREV I<</Prev	PRESET- I<< / Preset-
NEXT >>I/Next	PRESET+ >>I / Preset+

Original	Recharge

