 


 





 

 



 

 


 


 

 
 

 
 






 


 

 


 
 
 

 








Original		Recharge		Original		Recharge	
	Power		Power		Nicam		Audio / Lang I/II
	Mute		Mute / Dimmer		Menu		Menu / Home
	1		1		Up		Up
	2		2		Source		AV / Input / RDS
	3		3		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		Down		Down
	7		7		Exit		Exit / Cancel / Clear
	8		8		Display		Display / Media
	9		9		Vol+		Vol+
	0		0		CH+		CH+ / Page+
	-/--		Shift + Guide / EPG / -/--		Vol-		Vol-
	Recall		Back / Return		List		Smart / List
	P.Mode		Picture / Format		FAV/List		Fav / Marker / PC
	S.Mode		Sound / Title		CH-		CH- / Page-
	Sleep		Sleep / Timer		Tv/Radio		TV/Radio /



