











Original	Recharge
Power	Power
TXT	Text / Goto
MIX	Smart / List
Size	Zoom / Size
Index	Info / Angle
Hold	Shift + Stop /
Reveal	D.Menu / Top
Subcode	Display / Media
Cancel	Shift + Exit / Cancel / Clear
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Recharge
9	9
Timer	Sleep / Timer
0	0
Recall	Back / Return
Red/P.M.	Red / Netflix / Search
CH+	CH+ / Page+
Vol+	Vol+
Yellow/Sleep	Yellow / YouTube / Repeat
Green/S.M.	Green / APP / Repeat
CH-	CH- / Page-
Vol-	Vol-
Blue/Call	Blue / Prime Video / Random
Menu	Menu / Home
Up	Up
Source	AV / Input / RDS
Left	Left
Select	OK





Original	Recharge
	 Right
	 Exit / Cancel / Clear
	 Down
	 Mute / Dimmer
	 Picture / Format
	 Setup / OPT /
	 Subtitle / EQ
	 Fav / Marker / PC
	 TV/Radio /
	 Guide / EPG / -/--
	 Audio / Lang I/II
	 Sound / Title
	 Shift + 2
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Eject / Surround

Original	Recharge
	 I<< / Preset-
	 << / Tune-
	 >> / Tune+
	 >>I / Preset+

