



Original	Recharge
 Power	 Power
 Back	 Back / Return
 Home	 Menu / Home
 Up	 Up
 Wheel Up	 Shift + Down
 Left	 Left
 OK	 OK
 Right	 Right
 Wheel Down	 Shift + Up
 TV	 TV/Radio /
 Down	 Down
 Voice	 Display / Media
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+

Original	Recharge
 123/Input	 AV / Input / RDS
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Flashbk	 Setup / OPT /
 CH-	 CH- / Page-
 Mute/AD	 Mute / Dimmer





Original	Rechange	Original	Rechange
Power	Power	Yellow	Yellow / YouTube / Repeat
Recent	Shift + Guide / EPG / -/-	Green	Green / APP / Repeat
TV / PC	Shift + Fav / Marker / PC	Red	Red / Netflix / Search
My APPS	Display / Media	AD	Audio / Lang I/II
AV Mode	Shift + AV / Input / RDS	Search	Shift + Red / Netflix /
T.Opt	Shift + Setup / OPT / Tools	App	Shift + Green / APP /
Q.View	Eject / Surround	TV / Radio	TV/Radio /
Energy Saving	Sleep / Timer	Guide	Guide / EPG / -/-
Live Zoom	Shift + Zoom /	Info	Info / Angle
Live Menu	Shift + Menu /	Input	AV / Input / RDS
3D	Zoom / Size	List	Smart / List
AD / PIP	Sound / Title	1	1
>>	>> / Preset+	2	2
<<	<< / Preset-	3	3
Home / Smart	Menu / Home	4	4
Stop / Live TV	Stop / Hold	5	5
Blue	Blue / Prime Video / Random	6	6

Original	Rechange	Original	Rechange
Power	Power	Yellow	Yellow / YouTube / Repeat
Recent	Shift + Guide / EPG / -/-	Green	Green / APP / Repeat
TV / PC	Shift + Fav / Marker / PC	Red	Red / Netflix / Search
My APPS	Display / Media	AD	Audio / Lang I/II
AV Mode	Shift + AV / Input / RDS	Search	Shift + Red / Netflix /
T.Opt	Shift + Setup / OPT / Tools	App	Shift + Green / APP /
Q.View	Eject / Surround	TV / Radio	TV/Radio /
Energy Saving	Sleep / Timer	Guide	Guide / EPG / -/-
Live Zoom	Shift + Zoom /	Info	Info / Angle
Live Menu	Shift + Menu /	Input	AV / Input / RDS
3D	Zoom / Size	List	Smart / List
AD / PIP	Sound / Title	1	1
>>	>> / Preset+	2	2
<<	<< / Preset-	3	3
Home / Smart	Menu / Home	4	4
Stop / Live TV	Stop / Hold	5	5
Blue	Blue / Prime Video / Random	6	6





Original	Rechange	
7		7
8		8
9		9
0		0
OK		OK
Up		Up
Down		Down
Right		Right
Left		Left
Back		Back / Return
Vol +		Vol+
Vol -		Vol-
Mute		Mute / Dimmer
P +		CH+ / Page+
P -		CH- / Page-
Ratio		Picture / Format
Q.Menu		D.Menu / Top

Original	Rechange	
Subtitle		Subtitle / EQ
Settings		Setup / OPT /
>>		>> / Tune+
Play		Play / Slow
<<		<< / Tune-
Rec		Rec / Rec Mode
Pause		Pause / Step / Freeze
Text		Text / Goto
FAV		Fav / Marker / PC
Exit		Exit / Cancel / Clear

