





















Original		Rechange		Original		Rechange	
	On/Off		Power		OK		OK
	1		1		P-		CH- / Page-
	2		2		Down		Down
	3		3		i		Info / Angle
	4		4		Timer		Sleep / Timer
	5		5		TXT		Text / Goto
	6		6		Mute		Mute / Dimmer
	7		7		Red		Red / Netflix / Search
	8		8		Movies		AV / Input / RDS
	9		9		Green		Green / APP / Repeat
	0/AV		0		Internet		Smart / List
	Up		Up		Yellow		Yellow / YouTube / Repeat
	P+		CH+ / Page+		Menu		Menu / Home
	Right		Right		Blue		Blue / Prime Video / Random
	Vol+		Vol+		Games		Zoom / Size
	Vol-		Vol-		- Color		<< / Tune-
	Left		Left		Colour +		>> / Tune+





Original	Rechange
 - *	 I<< / Preset-
 * +	 >>I / Preset+
 E-Mail	 Display / Media
 Wake Up	 Subtitle / EQ
 Message	 Setup / OPT /
 Bill View	 Fav / Marker / PC
 Pay Accept	 Guide / EPG / -/--
 Radio	 TV/Radio /

Original	Rechange

