



 

















 

 



 

 






 


Original	Recharge
 On	 Power
 Standby	 Shift + Power
 Search	 Red / Netflix / Search
 HDMI	 0
 HDBaseT	 Display / Media
 DVI-D	 Blue / Prime Video / Random
 Computer	 Fav / Marker / PC
 BNC	 Green / APP / Repeat
 LAN	 D.Menu / Top
 SDI	 AV / Input / RDS
 Auto	 Guide / EPG / -/--
 Aspect	 Shift + Picture / Format
 Color Mode	 Picture / Format
 Test Pattern	 Text / Goto
 Freeze	 Pause / Step / Freeze
 Split	 Back / Return
 Lens Shift	 Subtitle / EQ

Original	Recharge
 Zoom	 Zoom / Size
 Focus	 Setup / OPT /
 Menu	 Menu / Home
 Esc/Mouse	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 Enter/Mouse	 OK
 Right	 Right
 Down	 Down
 A/V Mute	 Mute / Dimmer
 Default	 Audio / Lang I/II
 Page Up	 CH+ / Page+
 Volume+	 Vol+
 E-Zoom+	 >>I / Preset+
 Page Down	 CH- / Page-
 Volume-	 Vol-
 E-Zoom-	 I<< / Preset-





Original	Recharge	Original	Recharge
 i	 Info / Angle		
 Geometry	 Smart / List		
 Memory	 Rec / Rec Mode		
 1/User 1	 1		
 2/User 2	 2		
 3/User3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 Home	 Shift + Menu /		

