



Original	Recharge
Standby/On	Power
Sleep	Sleep / Timer
Video 1	Shift + 4
Video 2	Shift + 8
Video 3	Shift + 9
EXT In	Shift + 2
Tuner	Shift + 6
CD	Shift + 3
AUX	Shift + 7
Tape	Shift + 5
Level+	CH+ / Page+
CH Sel	Fav / Marker / PC
Volume+	Vol+
Level-	CH- / Page-
Muting	Mute / Dimmer
Volume-	Vol-
T.Tone	Display / Media

Original	Recharge
Up/PTY Select	Up
P.Scan	Smart / List
Left/EON TA	Left
Enter/RDS	OK
Right/EON PTY	Right
Repeat 1/All	Green / APP / Repeat
Down/Search	Down
Dimmer	Shift + Mute / Dimmer
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
Stop	Stop / Hold
>>I	>>I / Preset+
Pause	Pause / Step / Freeze
Play	Play / Slow
Auto	D.Menu / Top
< DSP	Shift + Left





Original	Recharge
DSP >	+ Shift + Right
Stereo	Audio / Lang I/II
SP Setup	Setup / OPT /
< Select	+ Shift + << /
Select >	+ Shift + >> /
Parameter	Red / Netflix / Search
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Cinema EQ	Subtitle / EQ

Original	Recharge
Dynamic Range	Eject / Surround
PAL/NTSC	Picture / Format

