



| Original | | Recharge | | Original | | Recharge | |
|----------|------------------|----------|--------------------------|----------|----------------|----------|-----------------------|
| | Power | | Power | | Vol+ Tv | | Vol+ |
| | Power Tv | | Shift + Power | | Clear | | Exit / Cancel / Clear |
| | DVD | | Shift + 2 | | 0 | | 0 |
| | VCR | | Shift + 4 | | AV/Input | | AV / Input / RDS |
| | Eject/Open-Close | | Eject / Surround | | Vol- Tv | | Vol- |
| | AV/Input Tv | | Shift + AV / Input / RDS | | << | | << / Tune- |
| | 1 | | 1 | | >> | | >> / Tune+ |
| | 2 | | 2 | | I<< | | I<< / Preset- |
| | 3 | | 3 | | >>I | | >>I / Preset+ |
| | PR/CH+ Tv | | Shift + CH+ / | | Pause/Step | | Pause / Step / Freeze |
| | 4 | | 4 | | Play | | Play / Slow |
| | 5 | | 5 | | Stop | | Stop / Hold |
| | 6 | | 6 | | Home | | Menu / Home |
| | PR/CH- Tv | | Shift + CH- / | | Up | | Up |
| | 7 | | 7 | | PR/CH/TRK+ | | CH+ / Page+ |
| | 8 | | 8 | | Disc Menu/List | | D.Menu / Top |
| | 9 | | 9 | | Disc Menu/List | | Smart / List |



