



Original		Rechange		Original		Rechange	
	Mute		Mute / Dimmer		Vol-		Vol-
	Power		Power		*		D.Menu / Top
	1		1		P-		CH- / Page-
	2		2		Home		Menu / Home
	3		3		Up		Up
	4		4		=		Setup / OPT /
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Back		Back / Return
	9		9		Down		Down
	PRE-CH		Fav / Marker / PC		Input		AV / Input / RDS
	0		0		Exit		Exit / Cancel / Clear
	List		Smart / List		Guide		Guide / EPG / -/-
	Vol+		Vol+		Text		Text / Goto
	[i]		Info / Angle		Lang		Audio / Lang I/II
	P+		CH+ / Page+		Subt.		Subtitle / EQ





	Original	Recharge	Original	Recharge
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	<<	<< / Tune-		
	Pause	Pause / Step / Freeze		
	>>	>> / Tune+		
	Zoom	Zoom / Size		
	Play	Play / Slow		
	Stop	Stop / Hold		
	Netflix	+  Shift + Red / Netflix /		

