



 
| Original | | Recharge | | Original | | Recharge | |
|----------|-------------|----------|--------------------|----------|---------|----------|-----------------|
| | Power AMP | | Power | | Select | | OK |
| | Power Audio | | Shift + Power | | Right | | Right |
| | 1 | | 1 | | Down | | Down |
| | 2 | | 2 | | Display | | Display / Media |
| | 3 | | 3 | | Band | | Smart / List |
| | Disc | | Eject / Surround | | CH- | | CH- / Page- |
| | 4 | | 4 | | CH+ | | CH+ / Page+ |
| | 5 | | 5 | | Tape 1 | | Shift + 5 |
| | 6 | | 6 | | Tape 2 | | Shift + 4 |
| | >=10 | | Guide / EPG / -/-- | | CD | | Shift + 3 |
| | 7 | | 7 | | Tuner | | Shift + 6 |
| | 8 | | 8 | | MD | | Shift + 8 |
| | 9 | | 9 | | DVD | | Shift + 2 |
| | 0 | | 0 | | Aux | | Shift + 7 |
| | Up | | Up | | Phono | | Shift + 1 |
| | Menu | | Menu / Home | | Muting | | Mute / Dimmer |
| | Left | | Left | | Volume- | | Vol- |





| Original | Recharge | Original | Recharge |
|---|--|----------|----------|
|  Volume+ |  VOL+ | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |




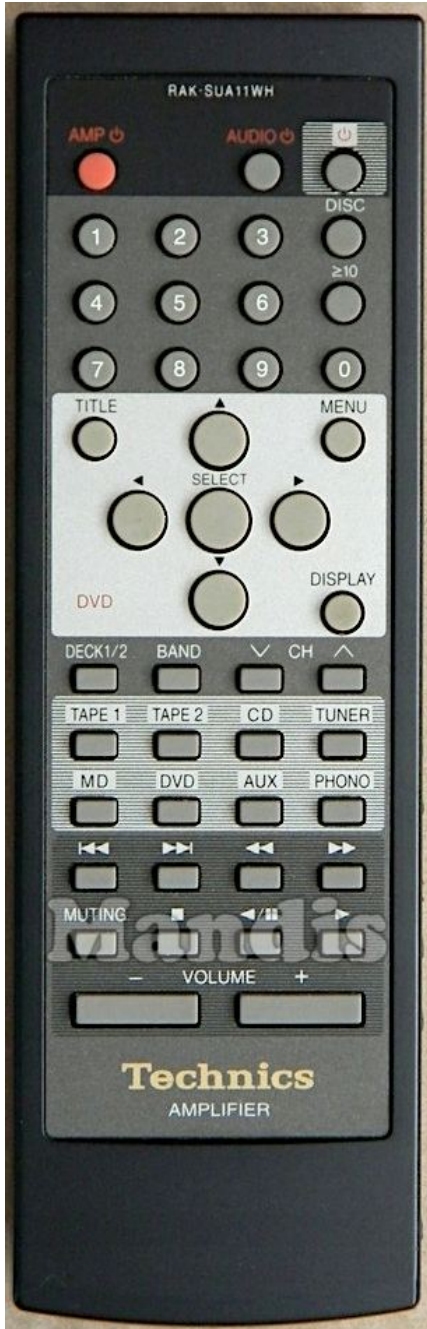

| Original | Recharge |
|---|---|
|  Power DVD |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Disc |  Eject / Surround |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  >10 |  Guide / EPG / -/- |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Up |  Up |
|  Menu |  Menu / Home |
|  Left |  Left |
|  Select |  OK |

| Original | Recharge |
|---|---|
|  Right |  Right |
|  Down |  Down |
|  Display |  Display / Media |
|  Band |  Smart / List |
|  CH- |  CH- / Page- |
|  CH+ |  CH+ / Page+ |
|  Tape |  Shift + 5 |
|  CD |  Shift + 3 |
|  DVD |  Shift + 2 |
|  I<</<< |  I<< / Preset- |
|  >>/>>I |  >>I / Preset+ |
|  Muting |  Mute / Dimmer |
|  Stop |  Stop / Hold |
|  Play |  Play / Slow |
|  Volume- |  Vol- |
|  Volume+ |  Vol+ |



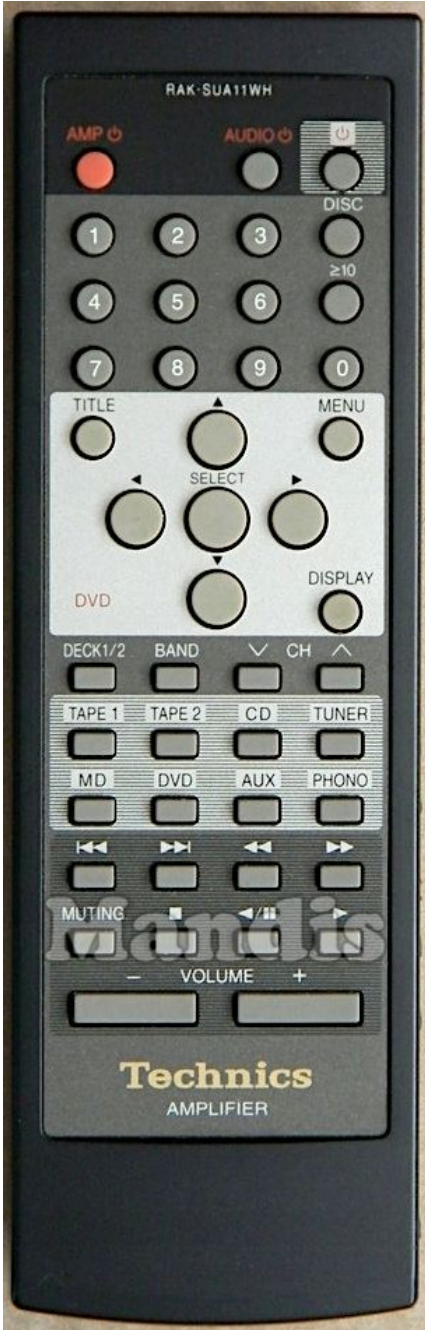 

| Original | Rechange |
|----------|--------------------|
| Power CD | Power |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| Disc | Eject / Surround |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| >=10 | Guide / EPG / -/-- |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| CD | Shift + 3 |
| TUNER | Shift + 6 |
| I<< | I<< / Preset- |
| >>I | >>I / Preset+ |

| Original | Rechange |
|----------|-----------------------|
| << | << / Tune- |
| >> | >> / Tune+ |
| Muting | Mute / Dimmer |
| Stop | Stop / Hold |
| Pause | Pause / Step / Freeze |
| Play | Play / Slow |
| Volume- | Vol- |
| Volume+ | Vol+ |

