



Original	Recharge
Power / Standby	Power
TV / Radio	TV/Radio /
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Subtitle	Subtitle / EQ
Text	Text / Goto
Hold	Shift + Stop /
TVG	Guide / EPG / -/--
Audio	Audio / Lang I/II
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze
<< / Size	<< / Tune-
<< / Size	Zoom / Size
>> / Subpage	>> / Tune+
Rec	Rec / Rec Mode

Original	Recharge
Stop	Stop / Hold
I<< / FAV	I<< / Preset-
I<< / FAV	Fav / Marker / PC
>>I / Index	>>I / Preset+
Menu	Menu / Home
Source	AV / Input / RDS
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Exit	Exit / Cancel / Clear
Aspect	Picture / Format
Vol+	Vol+
Mute	Mute / Dimmer
CH+	CH+ / Page+
Vol-	Vol-





	Original	Rechange	Original	Rechange
	Display	Display / Media		
	CH-	CH- / Page-		
	1	1		
	2	2		
	3	3		
	4	4		
	5	5		
	6	6		
	7	7		
	8	8		
	9	9		
	Shift + Guide / EPG / -/--	+  Shift + Guide / EPG / -/--		
	0	0		
	Recall	Back / Return		

