





 











 



















 











 

















| Original | Recharge | Original | Recharge |
|--|---|----------|----------|
|  Power |  Power | | |
|  Slow/Still Adjust- |  Down | | |
|  Slow/Still Adjust+ |  Up | | |
|  Audio Monitor |  Audio / Lang I / II | | |
|  Rec |  Rec / Rec Mode | | |
|  Pause |  Pause / Step / Freeze | | |
|  X2 |  Sleep / Timer | | |
|  <II |  Left | | |
|  II> |  Right | | |
|  Slow |  Shift + Play / | | |
|  << Search |  >> / Tune+ | | |
|  Play |  Play / Slow | | |
|  Search >> |  I<< / Preset- | | |
|  << Rew |  << / Tune- | | |
|  FF >> |  >>I / Preset+ | | |
|  Stop |  Stop / Hold | | |





 















 

 



 

 







| Original | | Recharge | | Original | | Recharge | |
|---|--------------------|---|-----------------------|----------|--|----------|--|
|  | Power |  | Power | | | | |
|  | Slow/Still Adjust- |  | Down | | | | |
|  | Slow/Still Adjust+ |  | Up | | | | |
|  | Audio Monitor |  | Audio / Lang I / II | | | | |
|  | Rec |  | Rec / Rec Mode | | | | |
|  | Pause |  | Pause / Step / Freeze | | | | |
|  | X2 |  | Sleep / Timer | | | | |
|  | < |  | Left | | | | |
|  | > |  | Right | | | | |
|  | Slow |  | Shift + Play / | | | | |
|  | << Search |  | >> / Tune+ | | | | |
|  | Play |  | Play / Slow | | | | |
|  | Search >> |  | I<< / Preset- | | | | |
|  | << Rew |  | << / Tune- | | | | |
|  | FF >> |  | >>I / Preset+ | | | | |
|  | Stop |  | Stop / Hold | | | | |





| Original | | Rechange | | Original | | Rechange | |
|---|--------------------|---|-----------------------|----------|--|----------|--|
|  | Power |  | Power | | | | |
|  | Slow/Still Adjust- |  | Down | | | | |
|  | Slow/Still Adjust+ |  | Up | | | | |
|  | Audio Monitor |  | Audio / Lang I/II | | | | |
|  | Rec |  | Rec / Rec Mode | | | | |
|  | Pause |  | Pause / Step / Freeze | | | | |
|  | X2 |  | Sleep / Timer | | | | |
|  | < |  | Left | | | | |
|  | > |  | Right | | | | |
|  | Slow |  | Shift + Play / | | | | |
|  | << Search |  | >> / Tune+ | | | | |
|  | Play |  | Play / Slow | | | | |
|  | Search >> |  | I<< / Preset- | | | | |
|  | << Rew |  | << / Tune- | | | | |
|  | FF >> |  | >>I / Preset+ | | | | |
|  | Stop |  | Stop / Hold | | | | |

