

 
 


 



 

 
 
 


 
 




 


 



 
 


 
 






 
 


 

 

 
 
 
 
 
 
 



 

 

 
 




 


 




 


 


 



 
 

 




Original		Recharge		Original		Recharge	
	Power		Power		6		6
	Tv/TXT		Text		7		7
	Input		AV		8		8
	OK		Ok		9		9
	Up		Up		0		0
	Down		Down		Back		Back
	Right		Right		FAV		Shift + Pre Ch
	Left		Left		Menu		Menu
	Vol+		Vol +		Exit		Exit
	Vol-		Vol -		Nicam/A2		Shift + Guide
	CH+		Ch +		Display		Shift + Info
	CH-		Ch -		Mute		Mute
	1		1		Picture		Format
	2		2		Sound		Dual
	3		3		Sleep		Sleep
	4		4		Subtitle		Subt
	5		5		EPG		Guide





	Original	Rechange		Original	Rechange
	CH/List	 Pre Ch			
	Red	 Red			
	Green	 Green			
	Yellow	 Yellow			
	Blue/Screen	 Blue			
	Play	 Play			
	Pause	 Pause			
	Stop	 Stop			
	Record	 Rec			
	>>/Size	 >>			
	<</Hold	 <<			
	Cancel	 Shift + Back			
	Reveal/Rep	 Eject			
	I<</Subpage	 D. Menu			
	>>I/Index	 Info			
	List	 List			

