





































| Original | Rechange |
|--|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Source |  AV / Input / RDS |
|  P.Mode |  Picture / Format |
|  S.Mode |  Sound / Title |
|  I/II/Audio |  Audio / Lang I/II |
|  Sleep |  Sleep / Timer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |

| Original | Rechange |
|--|--|
|  List |  Smart / List |
|  Recall |  Back / Return |
|  Tv Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |
|  Text |  Text / Goto |
|  Info/Display |  Display / Media |
|  Info/Display |  Info / Angle |
|  Up |  Up |
|  Left |  Left |
|  OK/Enter |  OK |
|  Right |  Right |
|  Down |  Down |
|  Vol- |  Vol- |
|  Vol+ |  Vol+ |
|  P- |  CH- / Page- |
|  P+ |  CH+ / Page+ |
|  Red |  Red / Netflix / Search |





| Original | Recharge |
|--|---|
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Subtitle |  Subtitle / EQ |
|  Hold |  Stop / Hold |
|  Size |  Shift + Zoom / |
|  Reveal |  D.Menu / Top |
|  Mix |  Shift + Text / |
|  Zoom/Index |  Zoom / Size |
|  Fav |  Fav / Marker / PC |
|  Subpage |  Eject / Surround |
|  Tv/Radio |  TV/Radio / |
|  EPG |  Guide / EPG / -/-- |
| | |
| | |
| | |
| | |

| Original | Recharge |
|----------|----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

