








 

 
 






 

 

 



 

 



 
 
 







Original	Recharge	Original	Recharge
 Power	 Power	 SAT	 Shift + 0
 Mute	 Mute / Dimmer	 Tv/Radio	 TV/Radio /
 1	 1	 Guide	 Guide / EPG / -/--
 2	 2	 Freeze	 Pause / Step / Freeze
 3	 3	 AUX In	 AV / Input / RDS
 4	 4	 UHF	 Display / Media
 5	 5	 Audio	 Audio / Lang I/II
 6	 6	 Red	 Red / Netflix / Search
 7	 7	 Yellow	 Yellow / YouTube / Repeat
 8	 8	 Green	 Green / APP / Repeat
 9	 9	 Blue	 Blue / Prime Video / Random
 0	 0	 Text	 Text / Goto
 Info	 Info / Angle	 Positioner	 Setup / OPT /
 Recall	 Back / Return	 Audio R/L	 D.Menu / Top
 Menu	 Menu / Home	 OK	 OK
 Exit	 Exit / Cancel / Clear	 Up	 Up
 FAV	 Fav / Marker / PC	 Down	 Down



