



Original		Rechange		Original		Rechange	
	Power		Power		2		2
	e		Smart / List		3		3
	Aspect Ratio		Picture / Format		PgUp		CH+ / Page+
	Freeze		Pause / Step / Freeze		Input VGA		Shift + 6
	Hide		Display / Media		4		4
	Zoom / Mouse		Zoom / Size		Input		Shift + 7
	ReSync		Setup / OPT /		5		5
	Source / Mouse Right		AV / Input / RDS		Input Video		Shift + 4
	Keystone Up		Vol+		6		6
	Up		Up		PgDn		CH- / Page-
	Left		Left		Input S-Video		Shift + 5
	Menu		Menu / Home		7		7
	Menu		OK		Input HDMI		Shift + 0
	Right		Right		8		8
	Keystone Down		Vol-		Intut Wireless		Shift + 9
	Down		Down		9		9
	1		1		Mute		Mute / Dimmer





Original

Recharge

0 MUTE	0	HDMI - BAT 0	0

Original

Recharge

