


| Original | | Recharge | | Original | | Recharge | |
|----------|---------|----------|---------------------------|----------|-------------------|----------|-----------------------------|
| | Standby | | Power | | TV | | Shift + 1 |
| | Mute | | Mute / Dimmer | | Still | | Pause / Step / Freeze |
| | 1 | | 1 | | Favor | | Fav / Marker / PC |
| | 2 | | 2 | | Source | | AV / Input / RDS |
| | 3 | | 3 | | Sleep | | Sleep / Timer |
| | 4 | | 4 | | Aspect | | Shift + Picture / Format |
| | 5 | | 5 | | Display | | Display / Media |
| | 6 | | 6 | | Red / P.Mode | | Picture / Format |
| | 7 | | 7 | | Red / P.Mode | | Red / Netflix / Search |
| | 8 | | 8 | | Green / S.Mode | | Shift + Sound / Title |
| | 9 | | 9 | | Green / S.Mode | | Green / APP / Repeat |
| | -/-- | | Guide / EPG / -/-- | | Yellow / S.Effect | | Sound / Title |
| | 0 | | 0 | | Yellow / S.Effect | | Yellow / YouTube / Repeat |
| | Prev. | | I<< / Preset- | | Blue / Stereo | | Audio / Lang I/II |
| | PC | | Shift + Fav / Marker / PC | | Blue / Stereo | | Blue / Prime Video / Random |
| | DTV | | Shift + 2 | | Up / CH+ | | Up |
| | AV | | Shift + 3 | | Up / CH+ | | CH+ / Page+ |

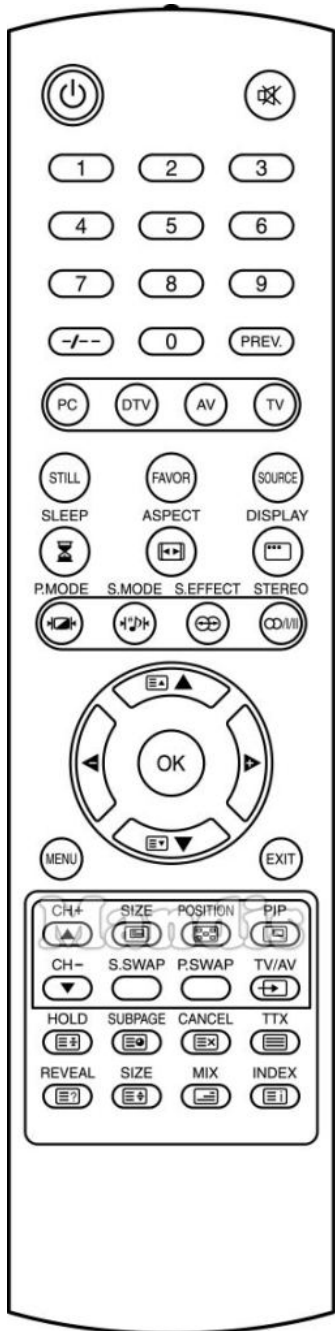



| Original | Recharge |
|----------|----------------------------|
| | Left |
| | Vol- |
| | OK |
| | Vol+ |
| | Right |
| | Menu / Home |
| | Down |
| | CH- / Page- |
| | Exit / Cancel / Clear |
| | Shift + CH+ / |
| | Shift + Red / Netflix / |
| | Shift + Green / APP / |
| | Smart / List |
| | Shift + CH- / |
| | Shift + Blue / Prime |
| | Shift + Yellow / YouTube / |
| | Shift + AV / Input / RDS |

| Original | Recharge |
|----------|-------------------------------|
| | Stop / Hold |
| | Subtitle / EQ |
| | Shift + Exit / Cancel / Clear |
| | Text / Goto |
| | D.Menu / Top |
| | Zoom / Size |
| | Shift + Text / |
| | Info / Angle |

