





 

 
 




























Original	Rechange
 Open/Close	 Eject / Surround
 Mute	 Mute / Dimmer
 DVD	 Shift + 2
 Tuner	 Shift + 6
 Scart	 Yellow / YouTube / Repeat
 AUX	 Shift + 7
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Shift + Guide / EPG / -/-

Original	Rechange
 Setup	 Setup / OPT /
 FM Mode	 Guide / EPG / -/-
 Pre/Tun	 Fav / Marker / PC
 Memo	 Rec / Rec Mode
 Auto	 D.Menu / Top
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Vol-	 Vol-
 Vol+	 Vol+
 CH-	 CH- / Page-
 CH+	 CH+ / Page+





	Original	Recharge
	I<<	I<< / Preset-
	>>I	>>I / Preset+
	<<	<< / Tune-
	>>	>> / Tune+
	Zoom	Zoom / Size
	Prog	TV/Radio /
	Slow	Shift + Play /
	A-B	Shift + YouTube / YouTube /
	Goto	Text / Goto
	Title	Sound / Title
	Menu	Menu / Home
	Display	Display / Media
	Subtitle	Subtitle / EQ
	N/P	Shift + Setup / OPT / Tools
	Language	Audio / Lang I/II
	Angle	Info / Angle
	Resume	Shift + Display / Media

	Original	Recharge
	Repeat	Green / APP / Repeat
	R/L	Shift + Subtitle / EQ
	Video	Shift + 4
	Return	Back / Return

