





Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide / EPG / -/--
 AV	 AV / Input / RDS
 Menu	 Menu / Home
 Swap	 Back / Return
 OK	 OK

Original	Rechange
 Up	 Up
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Down	 Down
 Right	 Right
 Vol+	 Vol+
 Left	 Left
 Vol-	 Vol-
 TV/TX	 Text / Goto
 PP	 Fav / Marker / PC
 16:9	 Setup / OPT /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Violet	 Display / Media
 [ ] Smart Controls	 Picture / Format





Original		Rechange	
CONTROLS	♪ Smart Controls	TITLE SOUND	Sound / Title
MIX	MIX))·((	LANG I/II AUDIO	Audio / Lang I/II
P100	P100	TIMER SLEEP	Sleep / Timer
SUB	SUB	EQ SUBTITLE	Subtitle / EQ
UPDATE	Update	SIZE ZOOM	Zoom / Size
HOLD	Hold	HOLD	Stop / Hold
DOUB	Doub	SURROUND	Eject / Surround
REV	REV	PROGRAM TV/RADIO	TV/Radio /

Original		Rechange	

