 













 



 

 

 

 





	Original	Recharge	Original	Recharge
	Source	 AV / Input / RDS		
	Power	 Power		
	Vol-	 Vol-		
	Vol+	 Vol+		
	I<<	 I<< / Preset-		
	>>I	 >>I / Preset+		
	ESS	 Smart / List		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	P1	 1		
	P2	 2		
	P3	 3		
	P4	 4		

