 







 



 







 













 



 







 



 









 











	Original	Rechange	Original	Rechange
	 P100	 Display / Media	 AV	 AV / Input / RDS
	 Power	 Power	 0	 0
	 REV	 << / Tune-	 -/--	 Guide / EPG / -/--
	 Doub	 Audio / Lang I/II	 P+	 CH+ / Page+
	 1	 1	 Up	 Up
	 2	 2	 Mute	 Mute / Dimmer
	 3	 3	 TV/TXT	 TV/Radio /
	 Hold	 Stop / Hold	 Menu	 Menu / Home
	 4	 4	 Left	 Left
	 5	 5	 Vol-	 Vol-
	 6	 6	 OK	 OK
	 Sub	 Subtitle / EQ	 Right	 Right
	 Update	 D.Menu / Top	 Vol+	 Vol+
	 7	 7	 Swap	 Back / Return
	 8	 8	 P-	 CH- / Page-
	 9	 9	 Down	 Down
	 Mix	 Text / Goto	 16:9	 Picture / Format



