

Original	Recharge	Original	Recharge
On/Off	 Power	Top Menu	 D.Menu / Top
Audio Off	 Mute / Dimmer	Setup	 Setup / OPT /
Play	 Play / Slow	Np	 Text / Goto
Pause	 Pause / Step / Freeze	Menu	 Menu / Home
Stop	 Stop / Hold	Menu Up	 Up
Record	 Rec / Rec Mode	C/CH	 Info / Angle
Rewind	 << / Tune-	Menu Left	 Left
F.Forward	 >> / Tune+	OK Enter	 OK
Prev.	 I<< / Preset-	Menu Right	 Right
Next	 >>I / Preset+	Menu Down	 Down
Title	 Sound / Title	Return	 Back / Return
Audio	 Audio / Lang I/II	Volume+	 Vol+
Subt.	 Subtitle / EQ	Auto/Track	 Smart / List
Open/Close	 Eject / Surround	Slow Up	 CH+ / Page+
R/L	 Picture / Format	Volume-	 Vol-
Zoom	 Zoom / Size	Display	 Display / Media
Progr.	 TV/Radio /	Slow Down	 CH- / Page-



Original	Recharge	Original	Recharge
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
+10	 Guide / EPG / -/--		
0		0	
Repeat/1/All	 Green / APP / Repeat		
Rep/A-B	 Yellow / YouTube / Repeat		
Video	 +  Shift + 4		

