



Original	Recharge
 Power	 Power
 Picture	 Shift + Format
 Sound	 Shift + Dual
 Input	 AV
 Menu	 Menu
 Exit	 Exit
 16:9/4:3	 Format
 Info	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Recharge
 0	 0
 FAV	 Pre Ch
 Recall	 Back
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Subtitle	 Subt
 Audio	 Dual
 Goto	 Guide
 Repeat	 Shift + Text





Original	Rechange
CH/List	List
Size	Eject
Sleep	Sleep
ECO/TFT Off	3D
Play	Play
Pause	Pause
Stop	Stop
<<	<<
>>	>>
I<<	I<<
>>I	>>I
Tv/TXT	Text
Subpage	Options
Hold	TV/R
Red	Red
Green	Green
Yellow	Yellow

Original	Rechange
Blue	Blue

