


 

 

 







 



 










 








 
 

 
 





Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Open/Close	 Eject / Surround
 Setup	 Setup / OPT /
 N/P	 Picture / Format
 DVD/DVB/Card	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 10+	 Guide / EPG / -/--

Original	Rechange
 Display	 Display / Media
 PBC	 Smart / List
 Title	 Sound / Title
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Search	 Shift + Red / Netflix /
 Mark	 Fav / Marker / PC
 Program	 Shift + TV/Radio / Program
 Zoom	 Zoom / Size
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Vol+	 Vol+





Original	Recharge	Original	Recharge
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 Vol-	 Vol-		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Audio	 Audio / Lang I/II		
 Subtitle	 Subtitle / EQ		
 Angle/Scan	 Info / Angle		
 Tv/Radio/A-B	 TV/Radio /		
 TTX/3D	 Text / Goto		
 Red/FAV/Step	 Red / Netflix / Search		
 Green/Del/Slow	 Green / APP / Repeat		
 Yellow/Pro/V-Mod	 Yellow / YouTube / Repeat		
 Blue/EPG/Repea	 Blue / Prime Video / Random		
A1	 +  Shift + 1		
A2	 +  Shift + 2		
A3	 +  Shift + 3		

