

 

 



 

 
 
 




 










Original	Rechange
 Power	 Power
 Program	 TV/Radio /
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/-
 Play	 Play / Slow
 C	 Exit / Cancel / Clear
 I<< Skip/Frame	 I<< / Preset-

Original	Rechange
 << Slow/Search	 << / Tune-
 Slow/Search >>	 >> / Tune+
 Skip/Frame >>	 >> / Preset+
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Title	 Sound / Title
 Menu	 Menu / Home
 Display	 Display / Media
 Search Mode	 Red / Netflix / Search
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Select	 OK
 Return	 Back / Return
 Zoom	 Zoom / Size
 Subtitle	 Subtitle / EQ





Original	Recharge	Original	Recharge
	Audio		Audio / Lang I/II
	Angle		Info / Angle
	Time		Sleep / Timer
	Repeat		Green / APP / Repeat
	A→B		Yellow / YouTube / Repeat

Original	Recharge

