







 






 



 

 

 



 







 





 



 



 

 

 









 



 




Original	Rechange	Original	Rechange
 Power	 Power	 V-	 Vol -
 Source	 AV	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 [G]	 Guide
 3	 3	 i	 Info
 4	 4	 Back	 Back
 5	 5	 Exit	 Exit
 6	 6	 OK	 Ok
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 TXT	 Text	 Netflix	 Media
 Lang	 Dual	 YouTube	 Smart
 Mute	 Mute	 Prime Video	 Shift + Smart
 Home	 Menu	 *1	 Format
 V+	 Vol +	 Red	 Red

Original	Rechange	Original	Rechange
 V-	 Vol -	 TV	 MUTE
 P+	 Ch +	 DVD	 SHIFT
 P-	 Ch -	 SAT	 AUX
 [G]	 Guide	 PLAY MODE	 REC MODE
 i	 Info	 Play	 Pause
 Back	 Back	 Stop	 FF
 Exit	 Exit	 FR	 Still
 OK	 Ok	 DISC NAV	 SOUND
 Up	 Up	 AD	 SETTINGS
 Down	 Down	 LIST	 DUAL
 Right	 Right	 SUBT	 OPT
 Left	 Left	 PROG	 SEARCH
 Netflix	 Media	 PICTURE	 ECO
 YouTube	 Smart	 SLEEP	 TV/R
 Prime Video	 Shift + Smart	 FORMAT	 3D
 *1	 Format	 E-MANUAL	 REPEAT
 Red	 Red	 ZOOM	 TIMER



