







 

 



 







 



 



 

 

 
 






 





 
 



 


















| Original | Recharge | Original | Recharge |
|--|---|--|--|
|  Power |  Power |  3D |  Shift + 3 |
|  1 |  1 |  ? |  Info / Angle |
|  2 |  2 |  @ |  D.Menu / Top |
|  3 |  3 |  Menu |  Menu / Home |
|  4 |  4 |  Up |  Up |
|  5 |  5 |  ← |  Back / Return |
|  6 |  6 |  Left |  Left |
|  7 |  7 |  OK |  OK |
|  8 |  8 |  Right |  Right |
|  9 |  9 |  Tools |  Setup / OPT / |
|  FAV |  Fav / Marker / PC |  Down |  Down |
|  0 |  0 |  Guide/Home |  Guide / EPG / -/-- |
|  TXT |  Text / Goto |  Guide/Home |  Smart / List |
|  Red |  Red / Netflix / Search |  Vol+ |  Vol+ |
|  Green |  Green / APP / Repeat |  Source |  AV / Input / RDS |
|  Yellow |  Yellow / YouTube / Repeat |  PR+ |  CH+ / Page+ |
|  Blue |  Blue / Prime Video / Random |  Vol- |  Vol- |





| Original | | Rechange | | Original | Rechange |
|---|----------|---|-----------------------|----------|----------|
|  | Mute |  | Mute / Dimmer | | |
|  | PR- |  | CH- / Page- | | |
|  | I< |  | I<< / Preset- | | |
|  | >I |  | >>I / Preset+ | | |
|  | << |  | << / Tune- | | |
|  | >> |  | >> / Tune+ | | |
|  | Rec |  | Rec / Rec Mode | | |
|  | Play |  | Play / Slow | | |
|  | Pause |  | Pause / Step / Freeze | | |
|  | Stop |  | Stop / Hold | | |
|  | Rec List |  | Display / Media | | |
|  | OQ |  | Audio / Lang I/II | | |
|  | [--] |  | Subtitle / EQ | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

