



| Original   | Rechange  |
|--|---|
|  Standby    |  Power             |
|  Source     |  AV / Input / RDS  |
|  Home       |  Shift + Menu /    |
|  e          |  D.Menu / Top      |
|  Mouse      |  Info / Angle      |
|  TV / Radio |  TV/Radio /        |
|  1          |  1                 |
|  2          |  2                 |
|  3          |  3                 |
|  4          |  4                 |
|  5         |  5                |
|  6        |  6               |
|  7        |  7               |
|  8        |  8               |
|  9        |  9               |
|  Display  |  Display / Media |
|  0        |  0               |

| Original   | Rechange  |
|--|---|
|  Recall       |  Back / Return         |
|  Recall       |  Fav / Marker / PC     |
|  Menu         |  Menu / Home           |
|  Exit         |  Exit / Cancel / Clear |
|  Up           |  Up                    |
|  Left         |  Left                  |
|  Enter        |  OK                    |
|  Right        |  Right                 |
|  Play / Pause |  Play / Slow           |
|  Play / Pause |  Pause / Step / Freeze |
|  Down        |  Down                 |
|  Stop       |  Stop / Hold         |
|  Vol +      |  Vol+                |
|  TXT        |  Text / Goto         |
|  CH +       |  CH+ / Page+         |
|  Vol -      |  Vol-                |
|  Mute       |  Mute / Dimmer       |



