



 



 



 

 

 

 

















 





 

 



 

 

 

 

 















Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol +		Vol+
	6		6		List		Smart / List
	7		7		CH +		CH+ / Page+
	8		8		Vol -		Vol-
	9		9		CH -		CH- / Page-
	Source		AV / Input / RDS		Fav		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Recall		Back / Return
	Up		Up		Red / <<		Red / Netflix / Search
	EPG		Guide / EPG / -/--		Red / <<		<< / Tune-







 









 

 











 

 













 







 



 

 











Original		Recharge		Original		Recharge	
	Green / >>		>> / Tune+				
	Green / >>		Green / APP / Repeat				
	Yellow / I<<		I<< / Preset-				
	Yellow / I<<		Yellow / YouTube / Repeat				
	Blue / >>I		Blue / Prime Video / Random				
	Blue / >>I		>>I / Preset+				
	Text / Play/Pause		Text / Goto				
	Text / Play/Pause		Pause / Step / Freeze				
	Text / Play/Pause		Play / Slow				
	Stop / Still		Stop / Hold				
	Timer / Subtitle		Subtitle / EQ				
	Size / Aspect		Zoom / Size				
	Cancel [≡X]		Shift + Exit / Cancel / Clear				
	Radio		TV/Radio /				
	Audio / I/II		Audio / Lang I/II				
	Rec		Rec / Rec Mode				




 





Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol+		Vol+
	6		6		List		Smart / List
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		CH-		CH- / Page-
	[≡?]/Source		AV / Input / RDS		♥		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	[≡i]/Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Back		Back / Return
	Up		Up		Red		Red / Netflix / Search
	EPG		Guide / EPG / -/--		<<		<< / Tune-





Original	Recharge
 Green	 Green / APP / Repeat
 >>	 >> / Tune+
 Yellow	 Yellow / YouTube / Repeat
 I<<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random
 >>I	 >>I / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 [≡]	 Text / Goto
 Stop/Still	 Stop / Hold
 [≡+]	 Picture / Format
 [≡o]/Subtitle	 Subtitle / EQ
 [≡♦]/[+]	 Zoom / Size
 [≡x]	 Setup / OPT /
 Radio	 TV/Radio /
 Audio	 Audio / Lang I/II
 Rec	 Rec / Rec Mode

Original	Recharge

