 



 

 

 
 
 
 
 

 
 
 
 
 

 

 
 
 
 



 








Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right

Original	Rechange
 Left	 Left
 OK	 Ok
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Red	 Red
 Yellow	 Yellow
 Blue	 Blue
 Green	 Green
 EPG	 Guide
 Subtitle	 Subt
 TTX	 Text
 Audio	 Dual
 i	 Info
 FAV	 Pre Ch
 Tv/Radio	 TV/R





Original		Rechange		Original		Rechange	
VIDEO	Video	HOME SMART	Smart				
SCAN	Scan	APP MEDIA	Media				
DEVICE	Device	SETTINGS OPT	Options				
FILE	File	DISC NAV LIST	List				
ZOOM	Zoom	ZOOM ▲	Eject				
ROLL	Roll	TIMER AV	AV				
RECORD	Record	REC MODE ●	Rec				
PREV	Prev.	⏮	I<<				
NEXT	Next	⏭	>>I				
▶/	Play	▶	Play				
▶/	Pause		Pause				
⏪	<<	⏪	<<				
⏩	>>	⏩	>>				

