



 



 


 



 


 




 



 






 
















 
 





 








 
 


 



Original		Rechange		Original		Rechange	
	Power		Power		P+		CH+ / Page+
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		P-		CH- / Page-
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		LCD Menu		Shift + D.Menu / Top Menu
	7		7		Down		Down
	8		8		DVB Menu		D.Menu / Top
	9		9		Input		AV / Input / RDS
	-/--		Guide / EPG / -/--		P.Mode		Picture / Format
	0		0		S.Mode		Sound / Title
	Recall		Back / Return		Sleep		Sleep / Timer
	Vol+		Vol+		Info/Display		Info / Angle
	Audio/Audio/Lang/ MTS		Audio / Lang I/II		Zoom/P.Ratio		Zoom / Size
	Exit/Exit		Exit / Cancel / Clear		Tv/Radio		TV/Radio /





Original	Recharge
 FAV	 Fav / Marker / PC
 TTX	 Text / Goto
 Pause/Hold/Cancel	 Pause / Step / Freeze
 Cancel/USB/Card	 Shift + Exit / Cancel / Clear
 EPG/List	 Shift + Guide / EPG / -/-
 Stop/Index/Stop	 Stop / Hold
 Size	 Shift + Zoom /
 Play/Play	 Play / Slow
 Reveal/Reveal	 Setup / OPT /
 Subtitle/Sub.PG	 Subtitle / EQ
 <</FR	 << / Tune-
 Red	 Red / Netflix / Search
 >>/FF	 >> / Tune+
 Green	 Green / APP / Repeat
 I<</Prev	 I<< / Preset-
 Yellow	 Yellow / YouTube / Repeat
 >>I/Next	 >>I / Preset+

Original	Recharge
 Blue	 Blue / Prime Video / Random

