
 










 





 







Original		Recharge		Original		Recharge	
	Power		Power		Vol+ Tv		Vol+
	Power Tv		Shift + Power		Dubbing		Setup / OPT /
	DVD		Shift + 2		0		0
	HDD		Shift + 7		AV/Input		AV / Input / RDS
	Open/Close		Eject / Surround		Vol- Tv		Vol-
	Av/Input Tv		Shift + AV / Input / RDS		<< Scan		<< / Tune-
	1		1		Scan >>		>> / Tune+
	2		2		I<< Skip		I<< / Preset-
	3		3		Skip >>I		>>I / Preset+
	PR/CH+ Tv		Shift + CH+ /		Pause/Step		Pause / Step / Freeze
	4		4		Play		Play / Slow
	5		5		Stop		Stop / Hold
	6		6		Home		Menu / Home
	PR/CH- Tv		Shift + CH- /		Up		Up
	7		7		PR/CH+		CH+ / Page+
	8		8		Menu/List		D.Menu / Top
	9		9		Menu/List		Smart / List





Original	Recharge	Original	Recharge
 Left	 Left	 Search	 Red / Netflix / Search
 Enter	 OK	 Clear	 Exit / Cancel / Clear
 Right	 Right	 Repeat	 Green / APP / Repeat
 Display	 Display / Media	 A-B	 Yellow / YouTube / Repeat
 Down	 Down	 Tv/DVD	 TV/Radio /
 PR/CH-	 CH- / Page-	 *	 Guide / EPG / -/--
 Return	 Back / Return		
 Timeshift	 Info / Angle		
 Audio	 Audio / Lang I/II		
 Subtitle	 Subtitle / EQ		
 CHP.ADD	 Text / Goto		
 Rec	 Rec / Rec Mode		
 Rec Mode	 Shift + Rec / Rec Mode		
 Title	 Sound / Title		
 Thumbnail	 Picture / Format		
 Zoom	 Zoom / Size		
 Marker	 Fav / Marker / PC		

